







Unit 626 Kilshane Avenue, North West Business Park, Ballycoolin, Dublin 15, Ireland
 Telephone: +353 1 8612 632, Fax: +353 1 8612 647, email: sales@driveriteltd.com
 www.driveriteltd.com

W217603148

LOAD SENSING VALVE FITTING INSTRUCTIONS

<p>Unbolt the LSV operating arm from the centre of the axle and remove the complete arm by pulling out the spring end.</p>		<p>Spanner 13 mm</p>	<p>VEHICLES WITHOUT ABS ONLY</p>
<p>Measure the exact length of this unit.</p>		<p>Measuring tape</p>	
<p>Undo the adjusting screw and remove the lower end of the unit.</p>		<p>Adjustable spanner</p>	<p>Rotating the spindle will assist removal.</p>
<p>Using the original adjusting screw, reassemble the unit to the original length with the LSV assembly (15). Make sure the cylinder is closed.</p>		<p>Measuring tape Adjustable spanner</p>	
<p>Cut the air line from the Air Springs and attach the LSV using a Tee piece.</p>		<p>Tube Cutter</p>	


Replace the unit on the vehicle using bolt, washer and nut also clamping control rod bracket.



13 mm spanner

VEHICLES
WITHOUT
ABS ONLY

AIR CIRCUIT

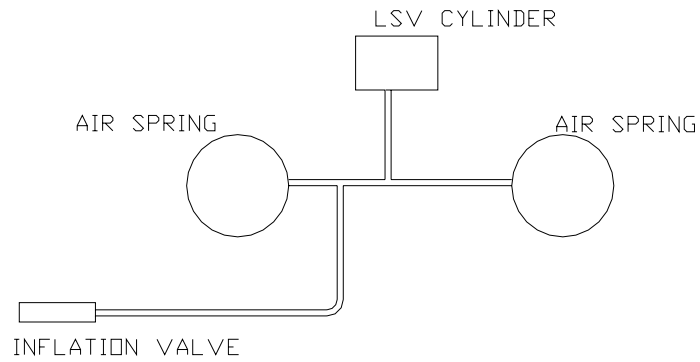

RENAULT MASTER DOUBLE CONVOLUTE (INFLATION VALVE VERSION)

NB: When the Air Suspension Kit is fitted along with the LSV Kit it is important to check the brakes with a laden and un-laden vehicle to ensure that they operate as per the recommended vehicle specifications.

If you have any question please contact Driverite for further details.